


# RAD SANDER

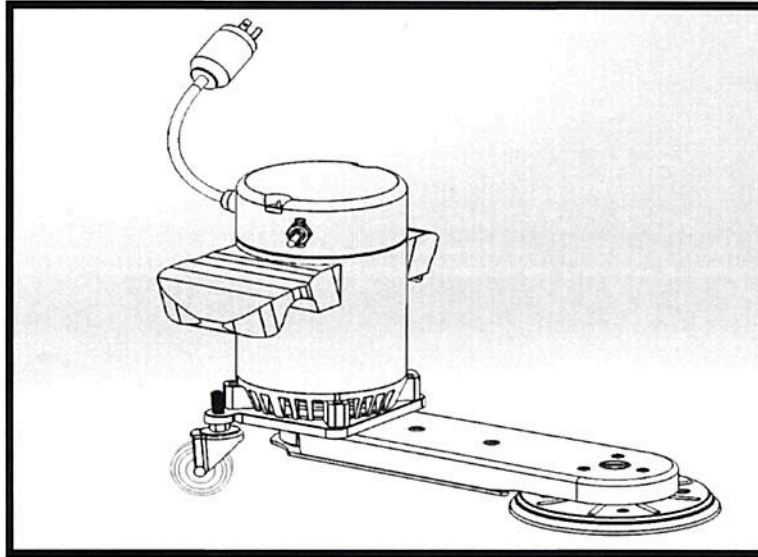

PART #	ITEM #	DESCRIPTION	QTY.
903	1	Cover- Motor	1
907	2	Switch- Internal	1
916	3	Switch- Centrifugal	1
917	4	Capacitor	1
915	5	Clip- Capacitor	1
920	6	Cover- Windings	1
928	7	Bearing	1
90926	8	Stator	1
90926-1	9	Rotor	1
90926-2	10	Cover- Bottom	1
940	11	Screw	2
942	12	Housing- Belt	1
943	13	Screw	3
945	14	Shaft- Belt Housing	1
949-8	15	Belt- <del>3L320</del> 32055	1
946	16	Housing- Bearing	1
947	17	Bearing	1
950	18	Screw	3
957	19	Pulley- Pad Grooved	1

PART #	ITEM #	DESCRIPTION	QTY.
956	20	Pad- Sanding	1
952	21	Pad- Washer	1
953	22	Screw	1
941	23	Spacer- Belt Guard	2
90942-2	24	Guard- Belt Guard	1
90942-1	25	Guard Belt	1
939	26	Wheel Assembly	2
954	27	Pulley- Motor Grooved	1
938	28	Screw	4
944	29	Plate- Motor Mount	1
931	30	Screw	2
927	31	Handle- Right	1
930	32	Screw	2
925	33	Handle- Right	1
919	34	Connector	1
905	35	Switch ON/OFF	1
921	36	Pigtail	1
906	37	Board- Terminal	1
922	38	Plug	1

